$1.00

Simpson

INSTRUMENTS THAT STAY ACCURATE

OPERATOR'S MANUAL

MODELS 2852 and 2853
3-1/2 DIGIT PANEL INSTRUMENTS

WARNING

For safe usage, it is essential that the operator read this manual carefully before using the instrument for any measurements.

SIMPSON ELECTRIC COMPANY

853 Dundee Ave., Elgin, Illinois 60120
Area Code 312, Telephone 697-2260
In Canada, Bach-Simpson, Ltd., London, Ontario

Warranty

SIMPSON ELECTRIC COMPANY warrants each instrument and other articles of equipment manufactured by it to be free from defects in material and workmanship under normal use and service, its obligation under this warranty being limited to making good at its factory any instrument or other article of equipment which shall within 90 days after delivery of such instrument or other article of equipment to the original purchaser be returned intact to it, or to one of its authorized service stations, with transportation charges prepaid, and which its examination shall disclose to its satisfaction to have been thus defective; this warranty being expressly in lieu of all other warranties expressed or implied and of all other obligations or liabilities on its part, and SIMPSON ELECTRIC COMPANY neither assumes nor authorizes any other persons to assume for it any other liability in connection with the sale of its products.

This warranty shall not apply to any instrument or other article of equipment which shall have been repaired or altered outside the SIMPSON ELECTRIC COMPANY factory or authorized service stations, nor which has been subject to misuse, negligence or accident, incorrect wiring by others, or installation or use not in accord with instructions furnished by the manufacturer.

Simpson®
INSTRUMENTS THAT STAY ACCURATE

ELECTRIC COMPANY
853 Dundee Ave., Elgin, Illinois 60120 Phone: (312) 697-2260
IN CANADA: Bach-Simpson, Ltd., London, Ontario
IN ENGLAND: Bach-Simpson (U.K.) Limited, Wadebridge, Cornwall
IN INDIA: Ruttonsha-Simpson Private, Ltd., International House, Bombay-Agra Road, Vikhroli, Bombay

KATY INDUSTRIES
ELECTRICAL EQUIPMENT GROUP

OPERATOR'S MANUAL

MODELS 2852 and 2853 3-1/2 DIGIT PANEL INSTRUMENTS

SIMPSON ELECTRIC COMPANY
853 Dundee Ave., Elgin, Illinois 60120
Area Code 312, Telephone 697-2260
In Canada, Bach-Simpson, Ltd., London, Ontario

Printed in U.S.A.
2M1278 (123.03)

Part No. 5-118096

Figure 1-1 Models 2852 and 2853, Digital Panel Instruments

TABLE OF CONTENTS

SECTION I

Introduction 1-1

1.1 General 1-1
1.2 PC Connector and Panel Mounting Options 1-2
1.3 Technical Data 1-3

SECTION II

Installation 2-1

2.1 Unpacking and Inspection 2-1
2.2 Power Source Requirements 2-1
2.3 Panel Mounting Instructions 2-3
2.4 Panel Mounting Instructions (for Instruments with optional kits) 2-3

SECTION III

Connector and Display 3-1

3.1 General 3-1

SECTION IV

Connections and Performance Checks 4-1

4.1 General 4-1
4.2 Safety Precautions 4-1
4.3 Connections and Initial Checks 4-1
4.4 Performance Checks 4-3

SECTION V

Theory of Operation 5-1

5.1 Overall System 5-1
5.2 Operation 5-1
5.3 Power Supply Circuits 5-3
5.4 Model 2853 Power Supply 5-3

SECTION VI

Maintenance 6-1

6.1 General 6-1
6.2 Warranty 6-1
6.3 Shipping 6-1
6.4 Case and Front Cover Removal 6-2

6.5 Line Fuse Replacement 6-2
6.6 Range Calibration 6-2
6.7 Preventive Maintenance 6-3
6.8 Troubleshooting 6-4

SECTION VII

Ordering Information, Schematic Diagram and Authorized Service Centers 7-1
7.1 General 7-1

LIST OF TABLES

1-1 Technical Data 1-3
3-1 Connector and Display 3-1
7-1 Items Supplied With the Instrument 7-1
7-2 Optional Mounting Hardware 7-1
7-3 Replacement Parts List 7-2
7-4 Resistance Values for R1, R2 and R8 7-4

LIST OF ILLUSTRATIONS

1-1 Models 2852 and 2853, Digital Panel Instruments ii
2-1 Panel Mounting and Cut-Out Dimensions 2-2
2-2 Panel Cut-Out and Adapter Ring Dimensions 2-4
2-3 Adapter Ring Dimensions 2-6
3-1 Models 2852 and 2853, Front Panel 3-1
3-2 Models 2852 and 2853, Rear Panel 3-2
3-3 Rear Connector, Markings and Circuits 3-3
4-1 Model 2852, Connector Wiring 4-2
4-2 Model 2853, Connector Wiring 4-2
5-1 Models 2852 and 2853, Overall Block Diagram 5-2
7-1 Models 2852 and 2853, Schematic Diagram 7-5

WARNING

These Instruments are designed to prevent accidental shock to the operator when properly used. However, no engineering design can render safe an instrument which is used carelessly. Therefore, this manual must be read carefully and completely before making any measurements. Failure to follow directions can result in a serious or fatal accident.

SHOCK HAZARD: As defined in American National Standard, C39.5, Safety Requirements for Electrical & Electronic Measuring & Controlling Instrumentation, a shock hazard shall be considered to exist at any part involving a potential in excess of 30 volts rms (sine wave) or 42.4 volts DC or peak and where a leakage current from that part to ground exceeds 0.5 milliampere, when measured with an appropriate measuring instrument defined in Section 11.6.1 of ANSI C39.5.

NOTE: The proper measuring instrument for the measurement of leakage current consists essentially of a network of a 1500 ohm non-inductive resistor shunted by a 0.15 microfarad capacitor connected between the terminals of the measuring instrument. The leakage current is that portion of the current that flows through the resistor. The Simpson Model 229-Series 2 AC Leakage Current Tester meets the ANSI C39.5 requirements for the measurement of AC leakage current and can be used for this purpose. To measure DC Leakage current, connect a 1500 ohm non-inductive resistor in series with a Simpson 0-500 DC microammeter and use this as the measuring instrument.

SECTION I

INTRODUCTION

1.1 GENERAL

1.1.1 The Models 2852 and 2853 shown in Figure 1-1 (hereafter referred to as the Models 2852 and 2853, or simply as the Instruments), are 3-1/2 digit, panel-mounted instruments that provide both visual indication and data recording outputs for either DC voltage or DC current measurement. Both Models feature 0.1% accuracy using solid-state integrated circuit electronics.

1.1.2 For general applications, the Model 2852 can be used as a self-contained, panel-mounted unit, operating from either a 120 or 240 volt AC, 50 to 400 Hz power source. The Model 2853 is equally suitable for various mounting configurations and it is designed to operate from a 5 VDC power source (check label on top of case). Additional features include solid-state light-emitting diodes (LED's) display, automatic polarity selection and indication, automatic zeroing, excellent temperature characteristics, up to 100 megohm input resistance (for DC voltage models), fast response time, and 100% overranging capability with automatic out-of-range indication.

1.1.3 The Models 2852 and 2853 are designed to measure DC voltage and DC current as specified in Table 1-1. The entire analog-to-digital converter circuitry is contained in two Large-Scale-Integration (LSI) modules. The LSI's used in these Instruments provide high reliability and compact design.

1.1.4 Both Models (2852 and 2853) are especially suited for system-oriented applications. The versatility of AC line or DC operation and 200 mV full range sensitivity allows the Instruments to be used as a direct replacement for an analog type panel instrument. This feature makes it convenient to convert existing instruments or systems from analog to digital display and at the same time improves the performance of the system. The Models 2852 and 2853 provide BCD outputs in a parallel bit, serial digit format.

1.1.5 The internal packaging of the Model 2852 consists of two printed circuit (PC) boards. These are the analog-to-digital (A/D) converter board and a digital display board. The Model 2853 has the same two boards as the Model 2852 plus a DC-to-DC converter board, which is used to provide the necessary operating voltages.

1.1.6 The 3-1/2 digit numeric display used in these Instruments are light-emitting diodes with 0.43-inch high characters. The combination assures easy viewing of the display from a distance and at wide angles. Ambient lighting effects are minimized by a polarized filter that reduces reflections and background illumination.

1.1.7 The Models 2852 and 2853 are each available in nine configurations: Four DC voltage ranges, and five DC current ranges, each with 0.1% measurement accuracy as shown in Table 1-1. The Instruments are designed to use a popular dual 15-pin (female) PC edge connector for making all input and output connections to and from the Instruments. Recommended connectors are listed in Table 3-1. The connector can be ordered as an option.

1.1.8 A pair of side brackets are supplied with each Instrument to facilitate mounting to a panel cut-out. If minimum side space is a requirement, a "U" bracket is available as an option.

1.2 PC CONNECTOR AND PANEL MOUNTING OPTIONS

An optional PC board connector is available for all input and output connections. The three panel mounting options adapt the Models 2852 and 2853 to cut-out dimensions in accordance with IEC (International Electrotechnical Commission), DIN (German Industrial Norms) and popular domestic sizes.

a. Catalog No. 22990 PC board connector. Use this item for all input and output connections to simplify installation.

b. Catalog No. 22992 is an IEC, DIN panel mounting adapter. Use this kit for mounting Models 2852 and 2853 in IEC or DIN panel cut-outs, which are 92 x 45 mm.

c. Catalog No. 22993 domestic panel adaptor (fits popular domestic cut-outs). Use this kit when the existing cut-out dimensions are 1.682 x 3.920 in. (99.57 x 42.72 mm).

d. Catalog No. 22991 IEC, DIN rear mounting bracket. Use this kit in addition to Catalog No. 22992 when the application must meet the maximum allowable width dimensions of the IEC or DIN standards, or when minimum side space is required.

1.3 TECHNICAL DATA

Table 1-1 lists the technical data for both Models 2852 and 2853.

Table 1-1. Technical Data

1. FULL SCALE RANGES:

DC Voltage:

Range	Maximum Indication	Input Resistance	Overload Protection	Catalog Numbers Model 2852	Model 2853
200mV	±199.9mV	⩾100MΩ	350V	24110	24119
2V	±1.999V	⩾100MΩ	350V	24111	24120
20V	±19.99V	10MΩ	350V	24112	24121
200V	±199.9V	10MΩ	350V	24113	24122

DC Current:

Range	Maximum Indication	Voltage Drop	Maximum Input Current	Catalog Numbers Model 2852	Model 2853
20μA	±19.99μA	200mV	20mA	24114	24123
200μA	±199.9μA	200mV	20mA	24115	24124
2mA	±1.999mA	200mV	20mA	24116	24125
20mA	±19.99mA	200mV	100mA	24117	24126
200mA	±199.9mA	200mV	1A	24118	24127

2. ACCURACY: ±(0.1% of reading +1 digit), from +15°C to +35°C.

3. TEMPERATURE COEFFICIENT:	±(0.01% of reading + 0.05 digit) per °C from 0°C to +55°C.
4. SENSITIVITY:	100μV for 200mV unit: 10nA for 20μA
5. RESOLUTION:	One part in 2000.
6. INPUT BIAS CURRENT:	40pA maximum at reference conditions (see item 16).
7. FULL RANGE STEP RESPONSE: (to rated accuracy)	Less than 800 milliseconds.
8. NORMAL MODE REJECTION:	55 dB minimum at 60 Hz.
9. COMMON MODE REJECTION: (with 1kΩ unbalance at 60 Hz)	Model 2852: 90 dB minimum Model 2853: 60 dB minimum
10. RATED CIRCUIT-TO-GROUND VOLTAGE:* (Maximum Common-Mode Voltage)	350 VDC between either input terminal and power line ground (2852) or 5 VDC terminals (2853).
11. CONVERSION:	
Technique:	Charge Balance
Rate:	4 samples per second nominal
12. DISPLAY:	
Type:	7-segment, light-emitting-diodes with 0.43" high numerals.
Number of Digits:	3 full digits plus overrange "1" digit.
Polarity:	Automatic, with "+" or "−" indication.
Out-of-Range:	All digits blink.
Decimal Point:	Fixed with range.

*The maximum voltage, with respect to ground, which may safely and continuously be applied to the circuit of an instrument.

13. POWER REQUIREMENT:

Model 2852:	120 or 240 VAC ±10%, 50Hz to 400Hz, 4 VA.
Model 2853:	5 VDC, ±5% @ 700mA.

14. TEMPERATURE RANGE:

Operating:	0°C to +55°C.
Storage:	−40°C to +60°C.

15. RELATIVE HUMIDITY: 0 to 90%, non-condensing.

16. REFERENCE CONDITIONS:

Temperature:	23°C ±2°C.
Atmospheric Pressure:	575 to 800 mmHg.
Relative Humidity:	30 to 60%.

17. WARM-UP TIME: Less than 2 minutes at reference conditions.

18. BCD OUTPUTS:

Logic Form:	C-MOS compatible, positive logic in 1-2-4-8 code. Parallel bit, serial in digit format.
Logic Levels:	"0" = 0 to +0.4 VDC "1" = +2.4 to +5.25 VDC.
Multiplex Sequence:	A1 (LSD), A3, A2, and A4 (MSD).

19. DIMENSIONS:

Instrument:	3.9" wide x 1.93" high x 4.27" deep (99 x 49 x 109 mm)
Panel Cut-Out:	3.622" x 1.68" (92 x 42.72 mm)
With Optional Adapters:	92 x 45 mm (3.622" x 1.670") DIN or IEC 99.57 x 42.72 mm (3.92" x 1.68") popular domestic

20. WEIGHT: Approximately 1 lb. (453 g).

SECTION II

INSTALLATION

2.1 UNPACKING AND INSPECTION

2.1.1 Examine the shipping carton for obvious signs of damage before unpacking. If shipping carton is in good condition, then unpack and inspect the instrument for possible damage incurred during shipment. If damage is noted, notify the carrier and supplier and do not attempt further use of the instrument. If the instrument appears to be in good condition, read Operator's Manual in its entirety. Become familiar with the instrument as instructed in the manual, then proceed to check the electrical performance as soon as possible. Also check that all items are included in the shipment (see Table 7-1).

2.1.2 Save the shipping carton and packing materials for future storage or shipment.

2.2 POWER SOURCE REQUIREMENTS

CAUTION

Do not attempt to connect the Model 2852 or 2853 to the power source until instructed to do so. Check that the power designation on top of the case agrees with the power source to be used.

The Model 2852 is wired at the factory for 120 volts AC operation (see Table 1-1). For 240 volt operation, consult your nearest Simpson representative. For proper operation, be sure that the power line ground connection of the Model 2852 is securely connected to a good earth (power line) ground. Preferably, use a standard 3-wire line cord and a 3-wire grounded outlet that conforms to the latest electrical code. All power connections are made to the PC board connector. The power requirement of the 2852 is approximately 4 VA. The Model 2853 is wired for 5 VDC operation, requiring approximately 700 mA.

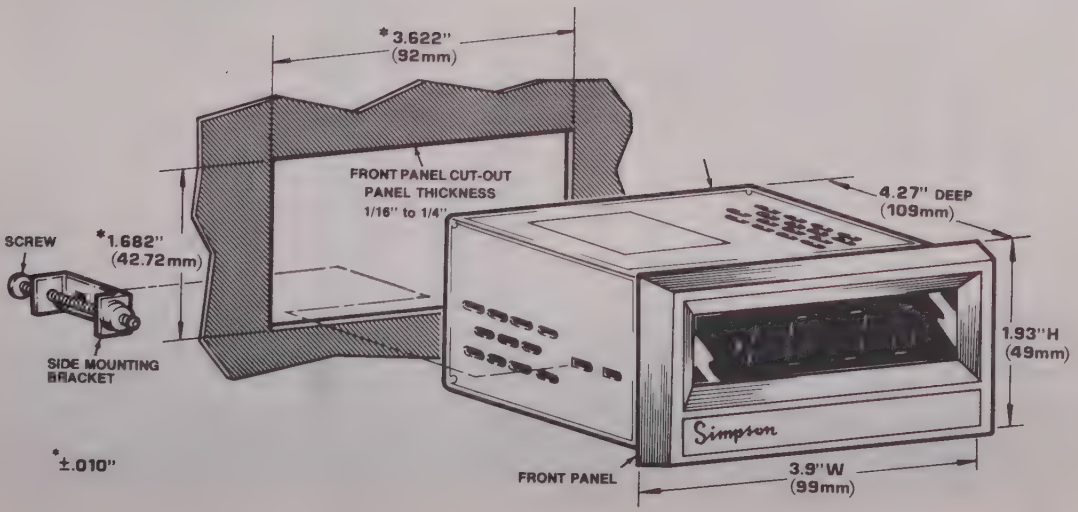

Figure 2-1. Panel Mounting and Cut-Out Dimensions

2.3 PANEL MOUNTING INSTRUCTIONS

The Model 2852 and 2853 can be mounted on panels ranging from 1 16" to 1 4" in thickness without any modification. To mount the Instrument, proceed as follows:

a. Insert the Instrument through the front panel cut-out.

b. Insert a side mounting bracket (10-863122) on each side of the Instrument. Use the two holes near the bezel as shown in Figure 2-1.

c. Slide the brackets towards rear of the slots until they lock in place.

d. Turn the screw in each bracket until the screws firmly contact the panel surface.

CAUTION

Do not tighten the screws. Wait until both screws are snug against the panel surface, then tighten the screws. Do not over tighten.

e. Refer to Table 1-1 for power requirements. Check that the power source connector is connected to the correct terminals of the PC board connector. Also be sure that the power source matches the label on the Instrument case. Refer to paragraph 4.3 for connector wiring and grounding instructions.

f. Plug in the electrical connector but do not apply power. Refer to Section IV for instructions.

2.4 PANEL MOUNTING INSTRUCTIONS (For Instruments With Optional Kits)

Adapter kits are available (see Table 7-2) so that the Models 2852 and 2853 can be used to replace instruments having a larger panel cut-out (see Figure 2-2). Two panel adapter rings are available to fit most popular sized panel cut-outs. Use the rear mounting "U" bracket (see Figure 2-3), when it is necessary to meet DIN or IEC width specifications.

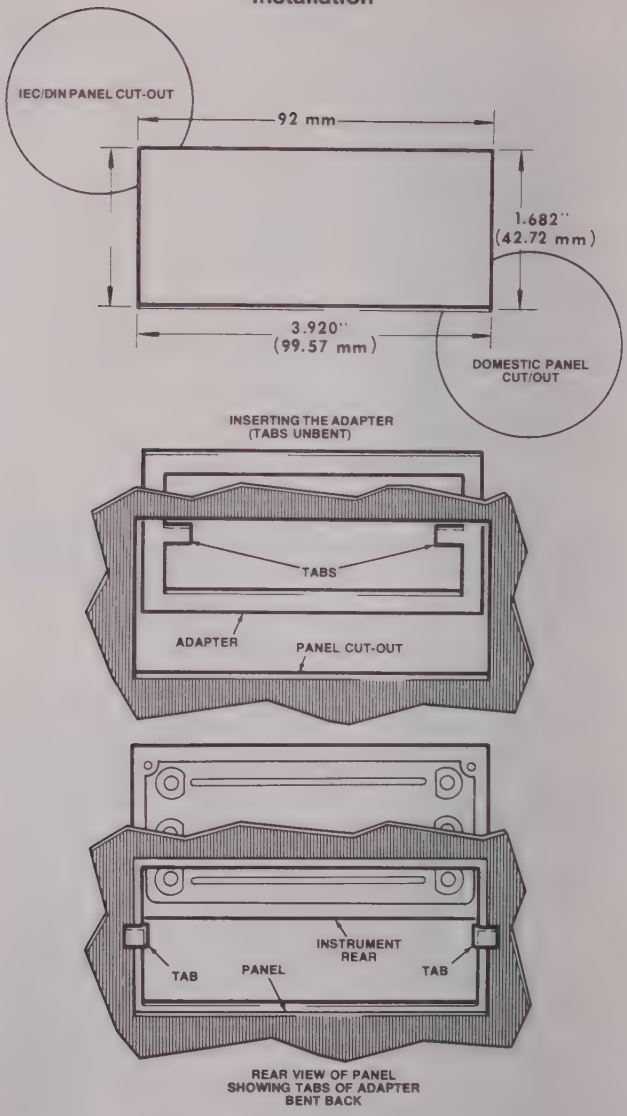

Figure 2-2. Panel Cut-Out and Adapter Ring Dimensions

2.4.1 Using the IEC, DIN adapter, Part Number 22992, when the cut-out size is 92 x 45 mm (see Figure 2-2):

a. Place the adapter ring over the panel cut-out with the mounting tabs extending through the hole.

b. While holding the adapter ring firmly against the panel, bend the mounting tabs against the rear surface of the panel.

c. The Adapter mounting ring is now secured to the front panel. Slide Instrument through hole in adapter ring and secure to panel by following mounting instructions in paragraph 2.3.

2.4.2 Using the Domestic Adapter, Part Number 22993, when the existing cut-out is 3.920 in. x 1.682 in. (99.57 x 42.72 mm) (see Figure 2-2):

a. Place the adapter ring over the panel cut-out with the mounting tabs extending through the hole.

b. While holding the adapter ring firmly against the panel, bend the mounting tabs against the rear of the panel.

c. Slide Instrument through hole in adapter ring and secure to panel by following mounting instructions in paragraph 2.3.

2.4.3 Using the rear mounting bracket, Part Number 22991 (when applications require that maximum width dimensions of IEC or DIN standards be met, use this bracket):

a. Insert the brass mounting studs (supplied with kit), into the two center holes at the rear of the Instrument. Tighten snugly.

b. Insert the Instrument through panel cut-out.

c. Slide the "U" bracket toward the panel surface until the holes in the bracket mate with the mounting studs on the rear of the Instrument. Push forward until studs extend through the holes in the brackets.

d. Place lockwasher and nut on each stud and turn until snug against bracket. Do not overtighten. Tighten nuts evenly.

e. Plug in PC board connector. Refer to paragraph 4.3 for electrical connections.

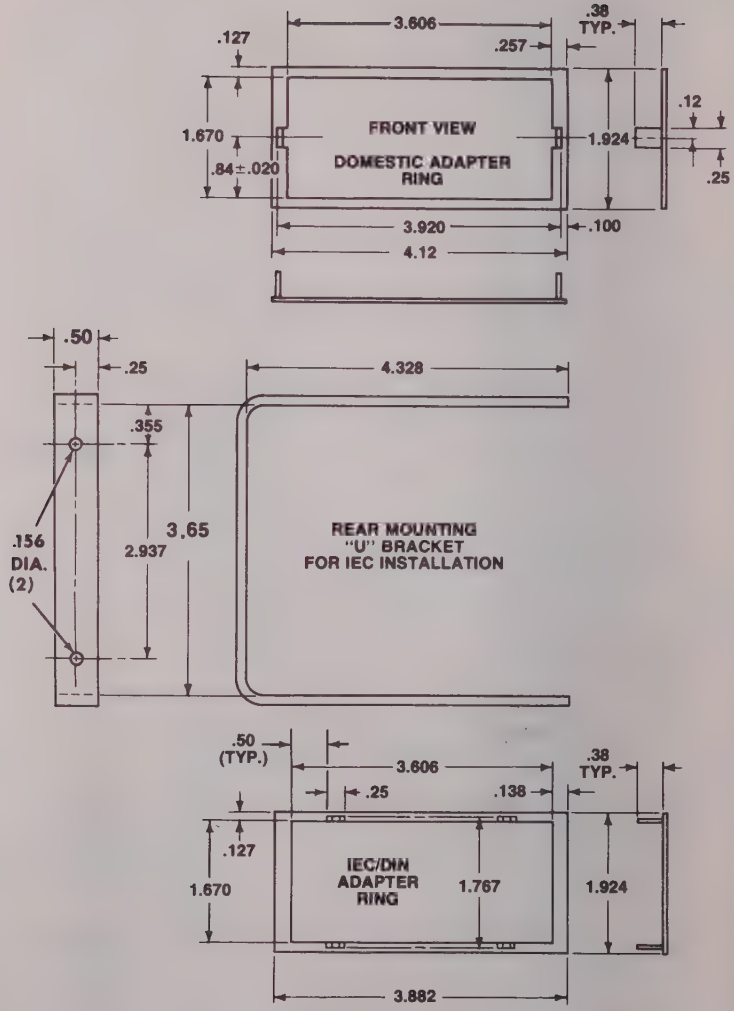

Figure 2-3. Adapter Ring Dimensions

SECTION III

CONNECTOR AND DISPLAY

3.1 GENERAL

Table 3-1 describes the connector and numeric display (see Figure 3-1) of the Models 2852 and 2853. Become thoroughly familiar with each item before operating the Instrument for the first time.

Table 3-1. Connector and Display

1. Front Panel

1. Numeric Display: The numeric display consists of a polarity (+, −) sign, a "1" digit, and three 7-segment type 0 to 9 digits. The display indicates (automatically) the polarity and value of the signal being measured. When an out-of-range condition exists (greater than 1999 counts), the display flashes.

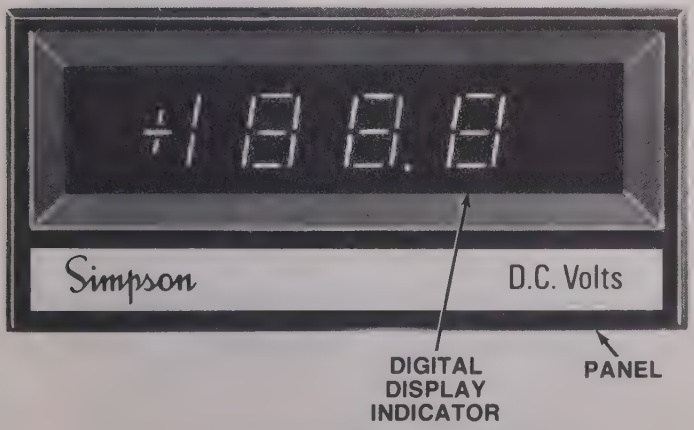

Figure 3-1. Models 2852 and 2853, Front Panel

2. Rear Panel

A/D Converter PC Board: All input and output connections are available at the contacts on the rear edge of the A/D converter PC board.

PC Board Connector: (Optional) This connector is a dual 15-pin (female) PC board edge connector (No. 22990), which plugs onto the A/D converter PC board. It provides a convenient means for making input power and signal connections to the Instrument. The contact markings and associated circuits are shown in Figure 3-3. Recommended Sources For PC Board Connector:

a. Viking Industries Type 2VK15 D/1-2-34
b. VS Components Inc. Type VPCR-D15-CD
c. Amphenol Corp. Type 225-21521-101-04

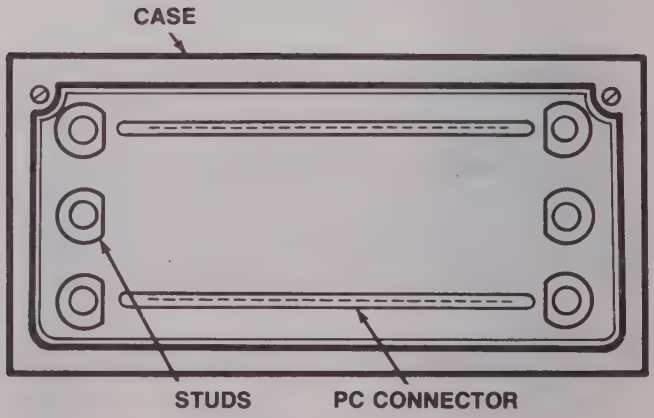

Figure 3-2. Models 2852 and 2853, Rear Panel

Connector Contact	2852 Circuit	2853 Circuit	Connector Contact	2852 Circuit	2853 Circuit
1	3rd-Wire GND	5 VDC Return	A	3rd-Wire GND	5 VDC Return
2	NC (No Connection)	NC	B	NC	NC
3	NC	NC	C	*120 VAC Low	NC
4	NC	+5 VDC	D	NC	NC
5	NC	NC	E	*120 VAC High	NC
6	NC	NC	F	NC	NC
7	NC	NC	H	NC	NC
8	A1, LSD (Multiplex)	A1, LSD (Multiplex)	J	Digital COMMON	Digital COMMON
9	A2 (Multiplex)	A2 (Multiplex)	K	B1(BCD 1)	B1(BCD 1)
10	A3 (Multiplex)	A3 (Multiplex)	L	B2(BCD 2)	B2(BCD 2)
11	A4, MSD (Multiplex)	A4, MSD (Multiplex)	M	B3(BCD 4)	B3(BCD 4)
12	Polarity Sign	Polarity Sign	N	B4(BCD 8)	B4(BCD 8)
13	NC	NC	P	"−" Input COMMON	"−" Input COMMON
14	NC	NC	R	NC	NC
15	NC	NC	S	"+ Input	"+" Input

*or 240 VAC, depending on unit ordered

Figure 3-3. Rear Connector, Markings and Circuits

SECTION IV

CONNECTIONS AND PERFORMANCE CHECKS

4.1 GENERAL

WARNING

The Models 2852 and 2853 are designed for maximum safety to the operator when mounted in a panel according to instructions contained in paragraph 2.3. They are not intended to be used unmounted or for exploratory measurements in unknown circuits.

4.2 SAFETY PRECAUTIONS

4.2.1 The Models 2852 and 2853 do not themselves present a shock hazard, but if connected to auxiliary line operated equipment, the auxiliary circuits must be properly grounded for safety and to prevent improper readings.

4.2.2 When connecting the Model 2852 to a power line circuit, make certain that the ground terminal of the PC board is connected to earth ground as shown in Figure 4-1.

4.2.3 Do not attempt to float the input terminals at more than 350 VDC, with respect to power line (earth) ground (2852) or to the 5 VDC terminal (2853). Doing so may damage the Instrument.

4.3 CONNECTIONS AND INITIAL CHECKS

4.3.1 Model 2852 Power Connection: Check that the voltage rating on the label agrees with the source voltage to be used. Do not apply line power until all signal connections are completed.

4.3.2 Model 2852 power connections are in accordance with Figure 4-1.

4.3.3 Model 2853 power connections (5 VDC) are in accordance with Figure 4-2. Observe polarity when making these connections.

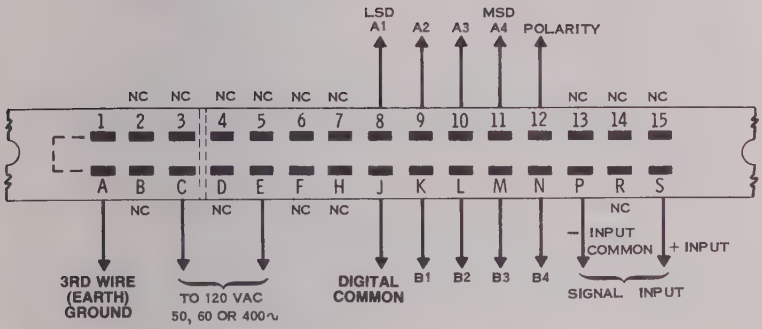

Figure 4-1. Model 2852, Connector Wiring

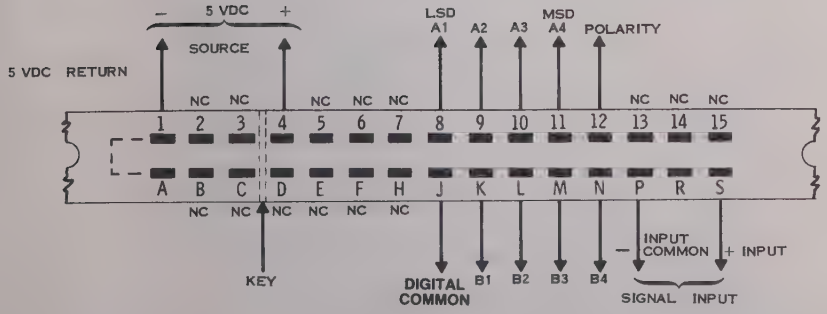

Figure 4-2. Model 2853, Connector Wiring

4.3.4 Signal input connections for the Models 2852 and 2853 are identical and in accordance with Figure 4-1 and 4-2. Use either a twisted pair of leads, or 2-wire shielded cable for low level, high output impedance circuits.

4.3.5 Offset Check

a. Orient the connector polarizing key so that it mates with the slot on the PC board and insert the PC connector onto the PC board.

NOTE: Two No. 4-40 x 5/8" screws are required to permanently attach the PC connector to the Instrument.

b. Short the signal input leads (place jumpers across terminals P and S).

c. Apply power to the instruments. For system operation of Models 2852 and 2853, turn the power switch ON to apply power to the PC connector and the circuit board. Allow a 2-minute warm-up period.

d. Check the display indication. It shall be +000 ±1 count. Decimal point indication depends on range of Instrument.

e. If difficulty is encountered, see Section VI.

4.4 PERFORMANCE CHECKS

a. **Remove power from the Instrument.**

b. Remove the short circuit from the input terminals P and S.

c. With the test voltage (or current) source turned OFF, connect the test voltage to terminals P and S, observing polarity.

d. Apply power to the instrument and the test voltage or current source.

e. Adjust the test voltage or current to values of interest and observe values indicated by the instrument.

f. If not within specifications, refer to paragraph 6.9.

SECTION V

THEORY OF OPERATION

5.1 OVERALL SYSTEM

5.1.1 The basic block diagram of the Model 2852 and 2853 is shown in Figure 5-1. The analog-to-digital conversion is accomplished by the quantized Charge-Balance technique. All A/D conversion circuitry are contained in two LSI integrated circuits. An Auto-Zero circuit minimizes the effects of offset and drift for greater accuracy.

5.1.2 The Instrument converts an analog DC voltage at the input terminals into a corresponding digital value and polarity which are displayed in numeric form on the 7-segment light-emitting diode (LED) display.

5.1.3 The inputs to the 200 mV or 2V full range instrument are connected to the input amplifier. The remaining DC voltage ranges are either the 200 mV or 2V (2000 counts) instruments with an appropriate attenuator in the input circuits. The DC current instruments are 200 mV full range (2000 counts) devices, with a precision shunt resistor across the input. The value of the shunt resistor varies depending on the current range of the Instrument.

5.2 OPERATION (Refer to Figure 5-1)

5.2.1 Time Base Counter

An external clock signal drives a two phase clock generator. The clock frequency is divided by the time base counter into sampling intervals of 6144 pulses of which 4096 constitutes the measurement interval and 2048 for the Auto-Zero interval.

5.2.2 Auto-Zero Interval

During the Auto-Zero interval the input amplifier is switched to circuit common. A pulsed Reference Current is supplied to the integrator/comparator by the control logic circuit. The Auto-Zero circuit equalizes the input to the integrator/comparator and maintains the equalizing current during the measurement interval.

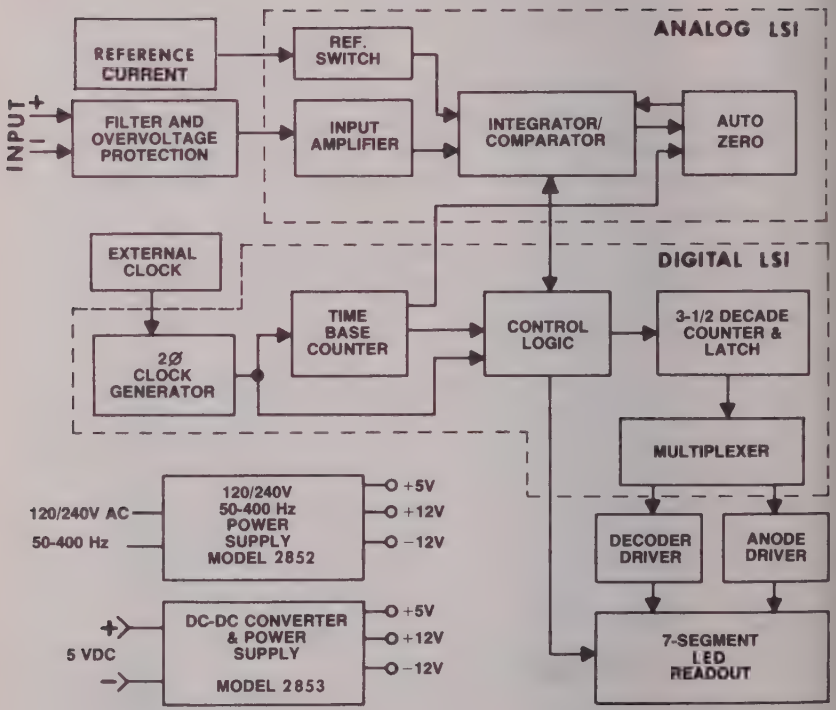

Figure 5-1. Models 2852 and 2853, Overall Block Diagram

5.2.3 Measurement Interval

The input voltage is now connected to the input amplifier. The integrator/comparator senses an imbalance which the control logic attempts to equalize by pulsing the Reference Current. During the equalization process, the counter/latch accumulates a count proportional to the magnitude of the input voltage.

5.2.4 Display

At the end of the measurement interval, the latch is strobbed and the counter is cleared. The multiplexer routes the information from the latches into the BCD and digit outputs. The BCD data are decoded into a 7-segment format which are connected to the cathodes of the display. The digit outputs control the anode drivers which select the correct digit. The 7-segment LED display gives a large, bright, easy to read display.

5.3 POWER SUPPLY CIRCUITS

5.3.1 The circuits for the Model 2852 power supply are shown in Figure 7-1.

5.3.2 Transformer T1 is a dual-primary power transformer. The two primary windings are connected in series for 240-volt and in parallel for 120-volt operation.

5.3.3 There are three secondary windings on transformer T1 which generate proper voltages as required by the circuitry. Rectifiers and regulators convert and regulate the output voltages.

5.3.4 Regulated DC voltages of +12V and −12V are produced by two full-wave rectifiers, followed by two series-type voltage regulators. These regulated voltages are used to supply power to the analog circuits.

5.3.5 A regulated DC voltage of +5V is produced by a full-wave rectifier followed by a series-type regulator. The +5V is used to supply power to all digital integrated circuits and LED's.

5.4 MODEL 2853 POWER SUPPLY

5.4.1 A DC-to-DC circuit board is used to convert the 5 VDC supply voltage to the various required circuit voltages of the Model 2853.

5.4.2 All the circuit connections are the same from the secondary of T201 as for T1 of the Model 2852. Circuit operation is also the same as that described for the Model 2852.

SECTION VI

MAINTENANCE

6.1 GENERAL

WARNING

This Instrument contains internal voltages that constitute a SHOCK HAZARD. For repairs or adjustments refer to a Simpson Authorized Service Center.

Models 2852 and 2853 are carefully designed and constructed with high quality components. Through proper care and operation, as outlined in this manual, you can expect a long, useful service life from this Instrument.

6.2 WARRANTY

The Simpson Electric Company warranty policy is printed in the inside front cover of the manual. Read carefully before requesting a warranty repair.

NOTE: For assistance of any kind, including help with the Instrument under warranty, contact your nearest Authorized Service Center for instructions. These are listed on the last pages of the manual. If you wish to contact the factory directly, give full details of the difficulty and include the Instrument Model Number, Serial Number, and date of purchase. Service or shipping instructions will be promptly sent to you. There will be no charge for repair of the Instrument under warranty beyond one-way transportation charges. If an estimate of charges for non-warranty or other service work is required, a maximum charge estimate will be quoted. This charge will not be exceeded without your prior approval.

6.3 SHIPPING

Pack the Instrument carefully and ship it prepaid to the destination indicated. Insure the shipment.

6.4 CASE AND FRONT COVER REMOVAL

WARNING

Remove all power and connections to the Instrument before removing the case or replacing the fuse.

The case and front cover can be removed for maintenance purposes as follows:

a. Disconnect the Instrument from the AC power source (Model 2852) or turn power OFF.

b. Remove the two screws that attach the PC connector to the Instrument (when used) and remove the PC board connector from the rear of the Instrument.

c. Remove the two screws that attach the front cover to the case and pull the PC board assembly forward out of the case.

6.5 LINE FUSE REPLACEMENT (Model 2852 only)

The line fuse is located next to the power transformer.

a. Remove the case and front cover as described in paragraph 6.4.

b. Carefully lift the defective fuse from the holder and replace with a type 1/8A, 8AG, normal-blow fuse, or equivalent (refer to Table 7-3 for part number when ordering).

c. Replace the case and front cover.

6.6 RANGE CALIBRATION

6.6.1 The Models 2852 and 2853 have been precisely calibrated at the factory. Use of quality components and precision circuitry eliminates the need for frequent recalibration. If recalibration is required, return the Instrument to a Simpson Authorized Service Center, or the factory.

6.7 PREVENTIVE MAINTENANCE

6.7.1 Daily Care

The case and front cover are made of a plastic material having good physical resistance and temperature characteristics. To maintain the Instrument in good condition, observe the following:

a. Immediately clean all spilled materials from the Instrument and wipe dry. If the spillage is corrosive, use a suitable cleaner to neutralize the corrosive action during cleaning.

b. Whenever possible, avoid prolonged exposure or usage in areas which are subject to temperature and humidity extremes, vibration or mechanical shock, dust or corrosive fumes, or strong electrical or electromagnetic interference.

6.7.2 Monthly Care

Verify Instrument accuracy by performing operational checks using known value sources. If repair is necessary, contact the nearest Authorized Simpson Service Center or the factory.

6.7.3 Annual Care

It is recommended that the Instrument be returned annually to a Simpson Authorized Service Center or Factory for a complete overall check, adjustment and calibration.

6.7.4 Storage

When the Instrument is not in use, store it in a location free from temperature extremes, dust, corrosive fumes, and mechanical vibration or shock.

6.8 TROUBLESHOOTING

6.8.1 If the Instrument does not operate satisfactorily, check the following items before attempting maintenance on the Instrument.

a. Check the power connections.

b. Check that the PC board connector is wired correctly and inserted properly (see Figures 4-1 and 4-2). Make sure that all contacts on the printed circuit board are clean.

c. Check that the value being measured is within the rating of the Instrument.

d. Ensure that the AC power source (Model 2852) is within the Instrument specifications, and free from excessive fluctuations and/or transients. Check the 5 VDC source for Model 2853. The source must deliver at least 700 mA for proper operation.

e. Ensure that the environment in which the Instrument is being used is within the Instrument specifications.

f. Inspect the device being measured and the measurement test set-up to insure that the proper shielding and grounding techniques have been used. Also check that the Instrument is not affecting the circuit being measured and that the measurement is valid. For example, DC accuracy can be affected by transients, or unwanted AC and DC signals introduced by electrostatic, electromagnetic, or capacitive pickup, or existing as part of the signal.

g. If it appears that there is no power, check the AC line fuse, refer to paragraph 6.5 for line fuse replacement.

6.8.2 If the steps taken in paragraphs 6.8 do not yield satisfactory results, ship the Instrument to a Simpson Authorized Service Center or the factory for adjustment or repair.

SECTION VII

ORDERING INFORMATION, SCHEMATIC DIAGRAMS, AND AUTHORIZED SERVICE CENTERS

7.1 GENERAL

Simpson Authorized Service Centers have been established throughout the United States and Canada. To obtain repair or recalibration for any item of Simpson equipment, contact the Authorized Service Center and make arrangements with them for the service you require. A list of the Authorized Service Centers is included on the last pages of this manual.

Table 7-1. Items Supplied With the Instrument

Quantity	Description	Part No.
1	Mounting Bracket	10-863122
1	Operator's Manual	5-118096

Table 7-2. Optional Mounting Hardware

Quantity	Description	Part No.
1	Panel adapter, DIN, IEC	22992
1	Panel adapter, Domestic type	22993
1	Mounting Bracket, Rear (DIN, IEC)	22991
1	Connector, PC Board	22990

Table 7-3. Replacement Parts List

Reference Symbol	Description	Part No.
C1	Capacitor, .003 μF, 20%, 100V	5-117732
C2, C3	Capacitor, .002 μF, 20%, 100V	5-116188
C4, C12, C13	Capacitor, .01 μF, 20%, 50V Ceramic	5-113215
C5	Capacitor, Trimmer, 5.5-60 pF, 100V	5-116235
C6	Capacitor, .1 μF, 20%, 100V	5-113612
C7	Capacitor, .0022 μF, 5%, 100V	5-117201
C10	2852, 1000 μF, 10V	5-118095
C10	2853, 100 μF, −10 to +50%, 25V	5-117737
C8, C9, C11	Capacitor, 100 μF, −10 to +50%, 25V	5-117737
C14	Capacitor, 15 μF, 16V	5-115534
D1, D2	Diode, Silicon, 1N4001	5-113200
D3	Diode, Silicon, Bridge Rect. W005	5-115945
D4	Diode, Silicon, 1N914	5-112004
DS1, DS2, DS3	Readout, 7-Segment, LED	5-117338
DS4	Readout, 7-Segment, LED	5-117337
F1	Fuse, 1/8A, 8AG Normal Blow	5-116378
IC1	Integrated Circuit, Analog A/D Converter, LD111	5-117724
IC2	Integrated Circuit, Digital A/D Converter, LD110	5-117723
IC3	Integrated Circuit, NE555	5-117150
IC4	Integrated Circuit, 7-Segment High Voltage Decoder/Driver DM7447	5-115927
IC5	Voltage Regulator, +5V, 7805	5-117149
R1	Depends on Range and Function (see Table 7-4)	
R2	Depends on Range and Function (see Table 7-4)	
R3	Resistor, 470kΩ, $\pm$10%, 1/2W	1-114227
R4	Resistor, 560kΩ, $\pm$10%, 1/4W	5-114984
R5	Resistor, 100kΩ, 10%, 1/4W	5-115514
R101-R104	Resistor, 100Ω, 10%, 1/4W	5-114968
R6	Resistor, 104kΩ, 1%, 1/4W	5-117712

R7	Potentiometer, 10kΩ, Cermet	5-117718
R8	Depends on Range and Function (see Table 7-4)	
R9	Resistor, 130kΩ, 5%, 1/4W	5-117709
R10	Resistor, 402Ω, 1%, 1/4W	5-116712
R37	Potentiometer, 2.2kΩ, Carbon	5-117717
R11	Resistor, 33kΩ, 10%, 1/4W	5-113875
R12	Resistor, 3kΩ, 5%, 1/4W	5-117952
R13	Resistor, 12kΩ, 5%, 1/4W	5-117194
R15	Resistor, 47Ω, 10%, 1/4W	5-114967
R18	Resistor, 1kΩ, 10%, 1/4W	5-113871
R19	Resistor, Network, 100Ω	5-118094
R14, R17, R20, R23, R26, R24	Resistor, 5.6kΩ, 10%, 1/4W	5-114975
R32	Resistor, 2.2MΩ, 10%, 1/4W	5-115441
R33	Resistor, 820Ω, 5%, 1/4W	5-117186
R34	Resistor, 5.1kΩ, 5%, 1/4W	5-117714
R36	Resistor, 6.2kΩ, 5%, 1/4W	5-117716
R16	Resistor, 22kΩ, 10%, 1/4W	5-113623
R37, R21, R24, R27, R30	Resistor, 470Ω, 10%, 1/4W	5-116093
R22, R25, R22, R25, R28, R31	Resistor, 4.7kΩ, 10%, 1/4W	5-113873
ZD1	Diode, Zener, 9.1V, 1N757	5-117728
ZD2	Diode, Zener, 9V, 1N937	5-117729
ZD3	Diode, Zener, 6.8V, 1N754	5-116323
ZD4	Diode, Zener 13V, 1N5243	5-117730
	Bezel, Molded Assembly	10-863086
	Mounting Hardware	10-863122
	Manual	5-118096
Q1, Q2, Q15,	Transistor, Silicon, NPN 2N4123	5-115931

Q3, Q4, Q5, Q6, Q8, Q10, Q12	Transistor, Silicon, NPN, MPS3394	5-112631
Q7, Q9, Q11, Q13	Transistor, Silicon, PNP, MPS3702	5-113864
Q14	Transistor, Silicon NPN, GET5306	5-115938
Q16	Transistor, Silicon, NPN 2N5815	5-117720
T1	Transformer, Power	5-118091

Additional Parts For Model 2853 Only

Q201, 202 Transistor, NPN D42C2N		5-117956
R202, 203	Resistor, 270Ω, 10%, 1/4W	5-114969
R201, 204	Resistor, 330Ω, 10%, 1/4W	5-114970
C201, 202	Capacitor, .1 μF, 100V	5-113883
C204	Capacitor, .05 μF, 600V	5-114782
T201	Transformer, DC-DC	5-118092

Table 7-4. Resistance Values for R1, R2 and R8

Range	R1	Part No.	R2	Part No.	R8	Part No.
20μA	Jumper	—	10kΩ	5-113631	10kΩ	5-113631
200μA	Jumper	—	1kΩ	5-115490	10kΩ	5-113631
2mA	Jumper	—	100Ω	5-115949	10kΩ	5-113631
20mA	Jumper	—	10Ω	5-115487	10kΩ	5-113631
200mA	Jumper	—	1Ω	5-116140	10kΩ	5-113631
200mA	Jumper	—	Open	—	10kΩ	5-113631
2V	Jumper	—	Open	—	100kΩ	5-117711
20V	9.9MΩ	5-117713	100kΩ	5-117711	10kΩ	5-113631
200V	9.9MΩ	5-117713	100kΩ	5-117711	100kΩ	5-117711

NOTES

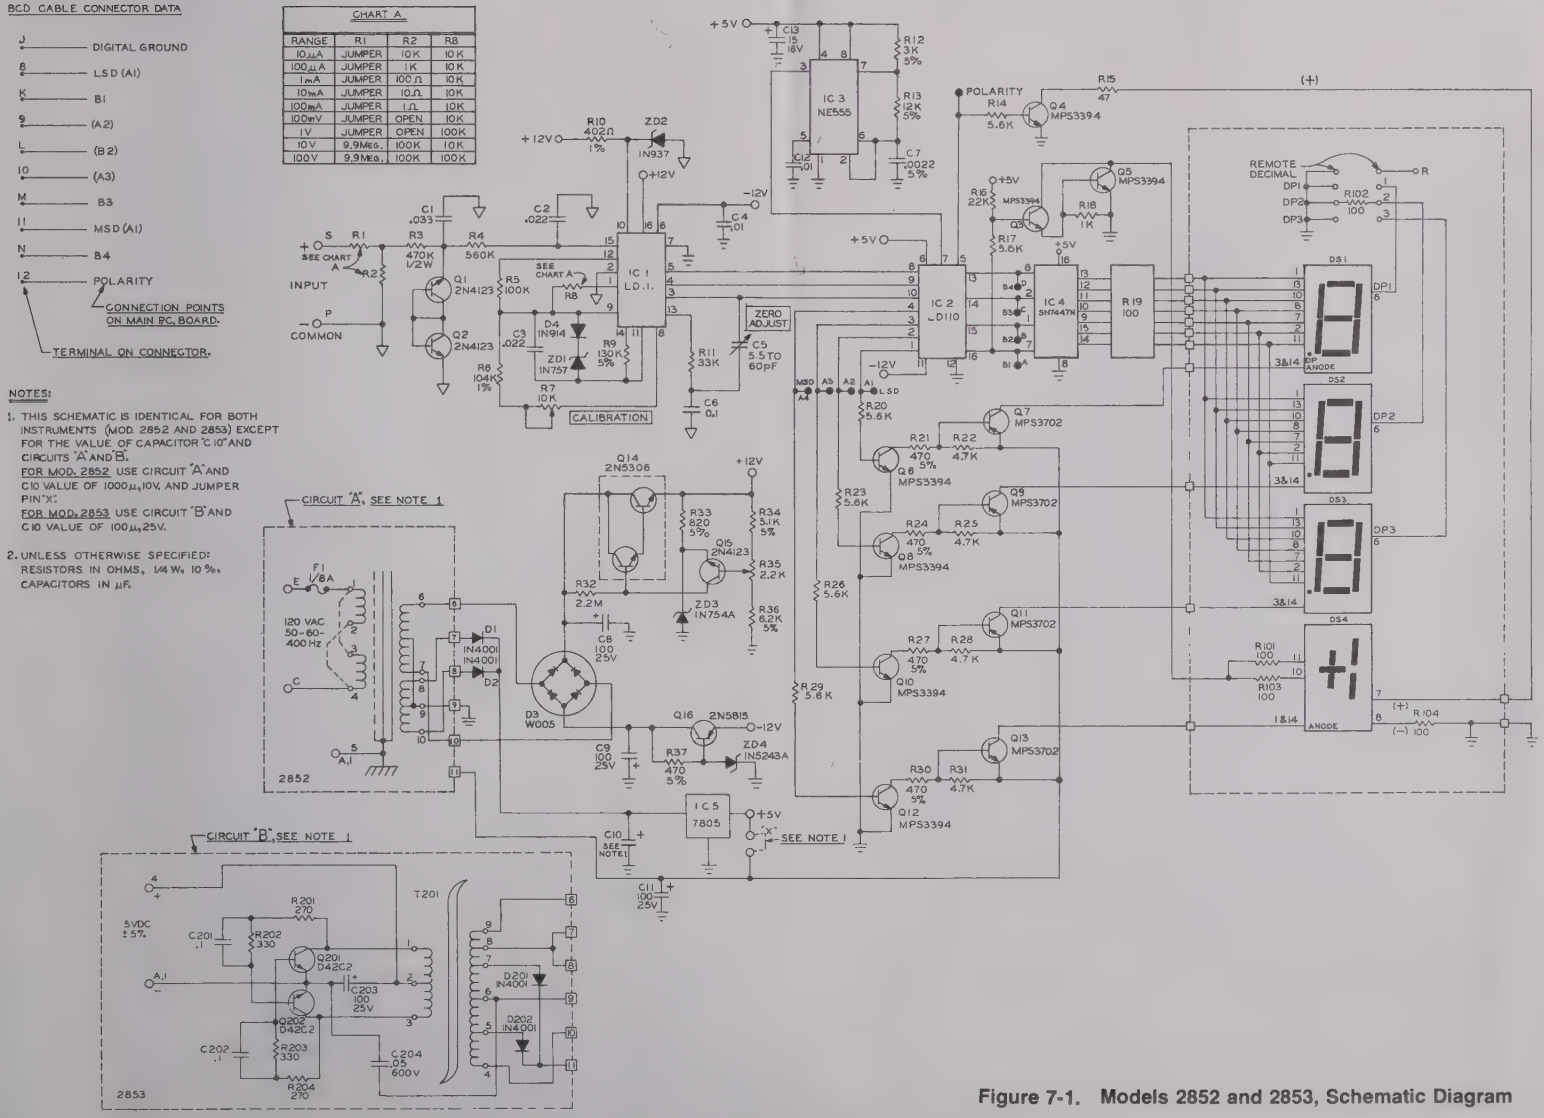
BCD CABLE CONNECTOR DATA
J DIGITAL GROUND
B LSD (A1)
K B1
9 (A2)
L (B2)
10 (A3)
M B3
11 MSD (A1)
N B4
12 POLARITY
CONNECTION POINTS ON MAIN PC. BOARD.
TERMINAL ON CONNECTOR.
CHART A
RANGE R1 R2 R8
10 µA JUMPER 10K 10K
100 µA JUMPER 1K 10K
1 mA JUMPER 100 Ω 10K
10 mA JUMPER 10 Ω 10K
100 mA JUMPER 1 Ω 10K
100 mV JUMPER OPEN 10K
1 V JUMPER OPEN 100K
10 V 9.9MEG. 100K 10K
100 V 9.9MEG. 100K 100K
NOTES:
1. THIS SCHEMATIC IS IDENTICAL FOR BOTH INSTRUMENTS (MOD. 2852 AND 2853) EXCEPT FOR THE VALUE OF CAPACITOR "C10" AND CIRCUITS "A" AND "B".
FOR MOD. 2852 USE CIRCUIT "A" AND C10 VALUE OF 1000 µ, 10V, AND JUMPER PIN "X".
FOR MOD. 2853 USE CIRCUIT "B" AND C10 VALUE OF 100 µ, 25V.
2. UNLESS OTHERWISE SPECIFIED: RESISTORS IN OHMS, 1/4 W, 10 %, CAPACITORS IN µF.
INPUT
COMMON
SEE CHART A
CALIBRATION
ZERO ADJUST
CIRCUIT "A", SEE NOTE 1
CIRCUIT "B", SEE NOTE 1
120 VAC 50-60-400 Hz
2852
2853
SEE NOTE 1
POLARITY
REMOTE DECIMAL
ANODE

Figure 7-1. Models 2852 and 2853, Schematic Diagram

AUTHORIZED SERVICE CENTERS

SIMPSON ELECTRIC COMPANY

853 Dundee Avenue, Elgin, Illinois 60120 — Phone: (312) 697-2260

★ Parts Sales & Repair Service Only

★★ Parts, General Test Equipment & Panel Instrument Sales & Service

★★★ Same Service As (★★) Above Plus Panel Instrument Modification

★★★☐ Additionally Authorized for Service on Recorders, Controllers, Digital Products and Lab Portables

★★★ALABAMA, MOBILE 36617
☐ BROWNELL-ELECTRO INC.
3450 Armour Drive
Tel. 205/479-8581

★ALASKA, ANCHORAGE 99501
YUKON RADIO SUPPLY, INC.
3222 Commercial Drive
P.O. Box 406
Tel. 907/277-1497

★ALASKA, ANCHORAGE 99500
R. M. ZOOK & ASSOCIATES
1710 E. 27th Avenue
Tel. 907/272-6917

★ALASKA, FAIRBANKS 99701
YUKON RADIO SUPPLY, INC.
1112 Cushman Street
Tel. 907/452-1011

★★★ARIZONA, PHOENIX 85040
☐ METERMASTER INC.
4134 E. Wood Street
Tel. 602/243-4111

★★CALIFORNIA, LOS ANGELES 90040
☐ E.I.L. INSTRUMENTS INC.
6212 Peachtree St.
Tel. 213/685-7020

★★★CALIFORNIA, GLENDALE 91201
☐ WEATHERFORD INSTRUMENT DIV.
WESTERN ELECTRONIC SUPPLY CORP.
640 Allen Street
Tel. 213/246-4861

★★★CALIFORNIA, LOS ANGELES 90040
☐ METERMASTER, INC.
5646 Jillson Street
Tel. 213/685-4340

★★★CALIFORNIA, PALO ALTO 94303
☐ METERMASTER, INC.
3995 E. Bayshore Road
Tel. 415/968-0313

★★★CALIFORNIA, SAN DIEGO 92123
☐ METERMASTER/SAN DIEGO
8799 Balboa Avenue
Tel. 714/560-4841

★★★CALIFORNIA, SAN FRANCISCO 94105
PACIFIC ELECTRICAL
INSTRUMENT LAB
150 Folsom
Tel. 415/543-3104

★★★CALIFORNIA, SANTA CLARA 95050
☐ FISHER-BROWNELL
3381 Edward Avenue
Tel. 408/988-6041

★★★CALIFORNIA, SOUTH PASADENA 91030
☐ ETALON COMPANY
1323 Huntington Drive
Tel. 213/257-5410

★★★COLORADO, DENVER 80223
☐ METER MASTER INSTRUMENT
CORPORATION
1165 S. Cherokee
Tel. 303/722-5766

★★★CONNECTICUT, MIDDLETOWN 06457
☐ THE MANCIB COMPANY
Subsidiary of E.I.L. Instruments
Randolph Road and Coe
Tel. 203/346-6646

★★FLORIDA, MIAMI 33136
FLORIDA PRECISION INSTRUMENT
COMPANY
800 N.W. 7th Avenue
Tel. 305/324-1731

★★★FLORIDA, MIAMI 33142
☐ KIMBALL ELECTRONIC LAB., INC.
3620 N.W. 48 Terrace
Tel. 305/635-9712

★★★FLORIDA, ORLANDO 32806
☐ BROWNELL-ELECTRO INC.
307 27th St., Box 8945
Tel. 305/843-6775

★★FLORIDA, TAMPA 33614
TAMPA INSTRUMENTATION CENTER
A.C. FERNANDEZ ELECTRIC
4807 N. Church Avenue
Tel. 813/870-0183

★★★GEORGIA, ATLANTA 30354
☐ BROWNELL-ELECTRO INC.
3020 Commerce Way
Tel. 404/762-5181

★★HAWAII, HONOLULU 96819
EMC CORPORATION
2979 Ualena Street
Tel. 808/847-1138

★★**HAWAII, HONOLULU 96819**
KEMS INCORPORATED
239 Puuhale Road
Tel. 808/847-1395

★★★**ILLINOIS, BRIDGEVIEW 60455**
E.I.L. INSTRUMENTS, INC.
9708 Industrial Drive
Tel. 312/430-2292

★★★**ILLINOIS, ELK GROVE VILLAGE 60007**
METERMASTER, INC.
121 Gordon Street
Tel. 312/593-8650

★★★**ILLINOIS, OAK PARK 60302**
PACIFIC INDICATOR COMPANY
6603 W. North Avenue
Tel. 312/261-1330

★★★**INDIANA, EVANSVILLE**
☐ ELECTRO-LAB SERVICES INC.
1302 N. Fulton 47710 (UPS)
P.O. Box 6011 47712 (MAIL)
Tel. 812/423-5211

★★**KANSAS, OVERLAND PARK 66206**
BROOKS ELECTRONICS INC.
3761 W. 95th Street
Tel. 913/648-3131

★★★**KANSAS, WICHITA 67211**
☐ MAIN ELECTRONICS INC.
225 Ida
Tel. 316/267-3581

★★★**LOUISIANA, HARAHAN 70123**
☐ INDUSTRIAL INSTRUMENT WORKS
134 Laitram Lane
Tel. 504/733-8355

★★★**MARYLAND, ELKRIDGE 21227**
☐ SUNSHINE SCIENTIFIC INSTRUMENTS, INC.
5800 Main Street
Tel. 301/796-5600

★★★**MARYLAND, GAITHERSBURG 20760**
☐ PIONEER/INSTRUMENTATION
Div. of Pioneer Standard Electronics Inc.
9100 Gaither Road
Tel. 301/948-0710

★★★**MARYLAND, SAVAGE 20863**
☐ INSTRUMENT SPECIALTIES INC.
Div. of Pyttronic Ind.
8220 Wellmoor Court
Tel. 301/792-0780

★★★**MARYLAND, TIMONIUM 21093**
☐ E.I.L. INSTRUMENTS, INC.
1830 York Road
Tel. 301/252-1260

★★**MASSACHUSETTS, BILLERICA 01821**
METERMASTER, INC.
13 Fortune Drive
Tel. 617/667-8346

★★★**MASSACHUSETTS, BURLINGTON 01803**
☐ THE MANCIB COMPANY
Subsidiary of E.I.L. Instruments Inc.
21 "A" Street
Tel. 617/272-9450

★★★**MICHIGAN, FERNDALE 48220**
☐ RAM METER, INC.
1100 Hilton Road
Tel. 313/398-6767

★★★**MINNESOTA, MINNEAPOLIS 55427**
☐ INSTRUMENTATION SERVICES INC.
957 Winnetka Avenue North
Tel. 612/544-8916

★★★**MISSOURI, ST. LOUIS 63108**
☐ INDUSTRIAL SERVICE LABORATORIES CORP.
4354 Olive Street
Tel. 314/535-5760

★★★**MISSOURI, ST. LOUIS 63143**
☐ SCHERRER INSTRUMENTS INC.
7170 Manchester
Tel. 314/644-5362

★★**MONTANA, BILLINGS 59102**
INDUSTRIAL ELECTRONICS & AUTOMATION COMPANY
2500 Grand Avenue
Tel. 406/656-1313

★★**NEBRASKA, LINCOLN 68508**
ELECTROMETRICS COMPANY
404 South 11th
Tel. 402/477-3434

★★★**NEW JERSEY, BELLEVILLE 07109**
MARSHALL INSTRUMENTS INC.
236 Washington Avenue
Tel. 201/751-1190

★★★**NEW JERSEY, SOUTH PLAINFIELD 07080**
BROWNELL-ELECTRO INC.
500 Hadley Road
Tel. 201/753-4600

★★★**NEW MEXICO, ALBUQUERQUE 87102**
☐ MISSOURI RESEARCH LAB, INC.
630 Haines Avenue NW
Tel. 505/243-6772

★★★**NEW YORK, CHADWICKS 13319**
MOHAWK COMMUNICATIONS
3500 Bleachery Place
Tel. 315/737-7328

★★★**NEW YORK, CHADWICKS 13319**
MOHAWK COMMUNICATIONS
3500 Bleachery Pl.
Tel. 315/737-7328

★★★**NEW YORK, CLARENCE 14031**
☐ TROTT ELECTRONICS INC.
9020 Wehrle Drive
Tel. 716/634-8500

★★★**NEW YORK, NEW YORK 10011**
BROWNELL-ELECTRO INC.
85 Tenth Avenue
Tel. 212/924-6000

★★★**NEW YORK, NEW YORK 10011**
☐ NILSSON ELECTRICAL LABORATORY, INC.
111 8th Avenue — Rm. 1525
Tel. 212/675-7944

★★★**NEW YORK, ROCHESTER**
☐ ELECTRONIC INSTRUMENT COMPANY
325 Mt. Read Blvd.
Tel. 716/328-4350

★★★**NORTH CAROLINA, CHARLOTTE 28216**
☐ BROWNELL-ELECTRO INC.
5141 Belhaven Blvd.
Box #16368
Tel. 704/394-4341

★★★**NORTH CAROLINA, RALEIGH 27612**
☐ INSTRUMENT TECHNICAL REP.
Rt. 8 — Box 115-C1
Umstead Industrial Park
Tel. 919/781-5256

★★★**OHIO, CLEVELAND 44105**
☐ PIONEER/INSTRUMENTATION INSTRUMENT LABORATORY
Div. of Pioneer-Standard Electronics, Inc.
4800 East 131st Street
Tel. 216/587-3600

★★★**OHIO, CLEVELAND 44135**
☐ WESCHLER ELECTRIC CORP.
16900 Foltz Parkway
Tel. 216/238-2550

★★**OHIO, COLUMBUS 43229**
CONTRONICS, INC.
835 Busch Court
Tel. 614/846-5930

★★★**OHIO, DAYTON 45404**
☐ PIONEER/DAYTON
Div. of Pioneer-Standard Electronics, Inc.
1900 Troy Street
Tel. 513/236-9900

★**OKLAHOMA, OKLAHOMA CITY 73107**
HUSTON LABORATORIES, INC.
536 No. Pennsylvania
Tel. 405/235-5469

★**OKLAHOMA, TULSA 74120**
AGRA ENGINEERING COMPANY
551 S. Quaker Avenue
Tel. 918/584-4235

★★★**OREGON, PORTLAND 97217**
☐ WESTCON, INC.
5101 N. Interstate
Tel. 503/283-0132

★★★**PENNSYLVANIA, PHILADELPHIA 19115**
☐ SUNSHINE SCIENTIFIC INSTRUMENTS INC.
1810 Grant Avenue
Tel. 215/673-5600

★★★**PENNSYLVANIA, PITTSBURGH 15238**
CAM/RPC
620 Alpha Drive RIDC Pk.
Tel. 412/782-3770

★★★**PENNSYLVANIA, PITTSBURGH 15221**
☐ E.I.L. INSTRUMENTS, INC.
1844 Ardmore Blvd.
Tel. 412/731-5230

★★★**TENNESSEE, MEMPHIS 38116**
☐ BROWNELL-ELECTRO INC.
3053 Tranquility Drive
Tel. 901/332-9258

★★**TENNESSEE, MEMPHIS 38104**
INSTRUMENT REPAIR SERVICE
468 N. Watkins
Tel. 901/278-0762

★★★**TENNESSEE, NASHVILLE 37210**
☐ BROWNELL-ELECTRO INC.
1050 Acorn Drive
Tel. 615/889-8230

★★★**TEXAS, DALLAS 75220**
☐ ULTRA INSTRUMENT LAB., INC.
9995 Monroe
Tel. 214/357-0297

★★★**TEXAS, EL PASO 79901**
BORDER ELECTRONICS
1704 E. Paisano Drive
Tel. 915/532-2524

★★★**TEXAS, GARLAND 75040**
METERMASTER, INC.
2809 National Drive
Tel. 214/271-5671

★★★**TEXAS, HOUSTON 77006**
☐ ELECTRICAL INSTRUMENT METER COMPANY (EIMCO)
1424 Westheimer
Tel. 713/526-6871 & 72

★★★**TEXAS, HOUSTON 77023**
☐ METERS & INSTRUMENTS CORP.
6428 Gulf Freeway
Tel. 713/644-1631

★★**TEXAS, ODESSA 79760**
METER SERVICE & SUPPLY
2127 Kermit Highway
P.O. Box 2373
Tel. 915/332-0565

★★★**TEXAS, ODESSA 79760**
☐ WHITLOCK INSTRUMENT
1306 North Texas
Tel. 915/337-3412

★★★**VIRGINIA, ALEXANDRIA 22312**
☐ E.I.L. INSTRUMENTS, INC.
5400 Cherokee Avenue
Tel. 703/354-4330

★★★**VIRGINIA, CHESAPEAKE 23325**
☐ INSTRUMENT TECHNICAL REP.
1835 Lockhard Street
Tel. 804/424-5121

★★★**VIRGINIA, RICHMOND 23234†**

★★★**VIRGINIA, CHESTERFIELD 23831††**
☐ INSTRUMENT TECHNICAL REPRESENTATIVES
7400 White Pine Road
Tel. 804/275-1431

★★★**WASHINGTON, SEATTLE 98105**
☐ EICHER-RICHARDS COMPANY
2727 N.E. Blakeley Street
Tel. 206/523-7888

★★★**WASHINGTON, SEATTLE 98108**
E.I.L. INSTRUMENTS, INC.
1312 S. 96th Street
Tel. 206/762-0880

★★**WASHINGTON, SPOKANE 99202**
BLACKS-INDUSTRIAL INC.
N. 401 Helena
P.O. Box 3286
Tel. 509/535-1504

★★★**WISCONSIN, MILWAUKEE 53202**
THE ELECTRO MECHANO COMPANY
241 East Erie Street
Tel. 414/272-4050

★★**WYOMING, LANDER 82520**
METER SPECIALISTS, INC.
P.O. Box 595 (MAIL)
Hiway 287 West (UPS)
Tel. 307/332-9711

---

† *Regular Mail Delivery*
†† *UPS Delivery*

Quality is the indispensable component
of every Simpson instrument . . . . . .